# Other instruments / adapters / accessories A 1632 eMobility Analyser



The A 1632 eMobility Analyser is a special accessory designed for diagnostic testing of Electric Vehicle Supply Equipment (EVSE) together with supported METREL testers. It supports verification of electrical safety and functional testing of Type 1 and/or Type 2 EVSE as well as testing of Mode 2 and Mode 3 electrical vehicle (EV) charging cables and communication monitoring between the charging station and the EV (simulated electric vehicle) during charging. It is also compatible with MESM software for station and cable-based professional reports

# APPLICATION


• EVSE functional and diagnostic testing according to EN 61851-1 and electrical safety testing according to EN 60364-6.



 Simulation of faults on mains for verification of Mode 2 electrical vehicle (EV) charging cable safety features.



- Electrical safety testing of 1-phase and 3-phase Mode 2 EV cables
- Electrical safety testing of Mode 3 EV cables.

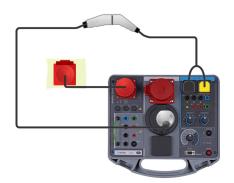



# COMPLETE EVSE TESTING

The combination of A 1632 eMobility Analyser or A 1532 EVSE adapter with Metrel's installation testers the MI 3155 EurotestXD or MI 3152 EurotestXC offers a complete solution for testing in circuits with a EV RCD or EV RCM 6 mA DC trip-out protection. It is possible to perform a compete RCD test sequence including the 6 mA DC ramp test and loop impedance (Zs rcd) measurement without tripping 6 mA DC EV RCD or EV RCM. This makes Metrel compliant with standards IEC 62752 (when Mode 2 EV cables are used) and EN 62955 (when Mode 3 cables are used).



### **TECHNICAL SPECIFICATION**

Nominal frequency range         0 Hz, 14 Hz 500 Hz           Phase rotation         1.2.3 or 3.2.1           Voltage UCP+, UCP-         -19.99 V 19.99 V         1 V         ±(2 % c           Frequency         500 1500 Hz         0.1 Hz         ±1 % of           Duty cycle         0.1 99.9 %         0.1 %         ±10 dig           levse         0.0 99.9 A         0.1 A         Calcula	of reading + 2 dig) of reading + 2 dig) f reading
Nominal frequency range	of reading + 2 dig) f reading ted value
Phase rotation	f reading ted value
Voltage UCP+, UCP-         -19.99 V 19.99 V         1 V         ±(2 % α           Frequency         500 1500 Hz         0.1 Hz         ±1 % of           Duty cycle         0.1 99.9 %         0.1 %         ±10 dig           levse         0.0 99.9 A         0.1 A         Calcula           Toff         0 399 ms         1 ms         ±(1 % α           Simulation functions         State         Misc.           PP simulation         n.c         > 300 kΩ         13 A         1.5 kΩ ±1.5 %           20 A         680 Ω ± 1.5 %         32 A         220 Ω ±1.5 %         4           80 A         56 Ω ± 1.5 %         80 A         56 Ω ± 1.5 %         4           80 A         56 Ω ± 1.5 %         80 A         56 Ω ± 1.5 %         4           C         882 Ω ± 1.5 %         80 A         90 A <td< td=""><td>f reading ted value</td></td<>	f reading ted value
Frequency	f reading ted value
Duty cycle	ted value
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	ted value
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	n reading 1 3 dig/
$\begin{array}{c c} \text{functions} \\ \\ \text{PP simulation} \\ \\ \text{PP simulation} \\ \\ \text{13 A} \\ \\ \text{20 A} \\ \text{680 } \Omega \pm 1.5 \% \\ \\ \text{20 A} \\ \text{220 } \Omega \pm 1.5 \% \\ \\ \text{32 A} \\ \text{220 } \Omega \pm 1.5 \% \\ \\ \text{80 A} \\ \text{56 } \Omega \pm 1.5 \% \\ \\ \text{80 A} \\ \text{56 } \Omega \pm 1.5 \% \\ \\ \text{CP simulation} \\ \\ \text{A} \\ \text{B} \\ \text{2.74 k} \Omega \pm 1.5 \% \\ \\ \text{C} \\ \text{882 } \Omega \pm 1.5 \% \\ \\ \text{D} \\ \text{D 246 } \Omega \pm 1.5 \% \\ \\ \text{D} \\ \text{D 246 } \Omega \pm 1.5 \% \\ \\ \text{D} \\ \text{D 30a, functions} \\ \text{Error} \\ \text{Misc.} \\ \\ \text{System state} \\ \\ \text{A2} \\ \text{no EV connected} \\ \text{A2} \\ \text{no EV connected / PWM} \\ \\ \text{B1} \\ \text{EV connected / PWM} \\ \\ \text{B2} \\ \text{EV connected / PWM} \\ \\ \text{C1} \\ \text{EV charged} \\ \text{C2} \\ \text{EV charged and ventilation on} \\ \\ \text{D1} \\ \text{EV charged and ventilation on} \\ \\ \text{D2} \\ \text{EV charged and ventilation on / PWM} \\ \\ \text{E} \\ \text{Error} \\ \\ \text{F} \\ \text{Failure} \\ \\ \text{Invalid} \\ \text{CP signal can't be classified} \\ \\ \text{Error functions} \\ \text{State} \\ \text{Misc.} \\ \\ \text{Uinput fault} \\ \\ \text{Uinput fault} \\ \\ \text{U/L1op} \\ \text{L/L2op} \\ \text{L/L2 conductor open} \\ \\ \text{L/L2op} \\ \text{L/L2 conductor open} \\ \\ \text{L/L3 conductor open} \\ \\ \text{L/L3 conductor open} \\ \\ \text{L/L3 conductor open} \\ \\ \text{L$	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	
$ \begin{array}{c ccccc} & & 882 \ \Omega \pm 1.5 \ \% \\ \hline D & 246 \ \Omega \pm 1.5 \ \% \\ \hline Diag. \ functions & Error & Misc. \\ \hline System state & A1 & no EV \ connected \\ \hline A2 & no EV \ connected \ / \ PWM \\ \hline B1 & EV \ connected \ / \ PWM \\ \hline B2 & EV \ connected \ / \ PWM \\ \hline C1 & EV \ charged \\ \hline C2 & EV \ charged \ / \ PWM \\ \hline D1 & EV \ charged \ and \ ventilation \ on \\ \hline D2 & EV \ charged \ and \ ventilation \ on \ / \ PWM \\ \hline E & Error \\ \hline F & Failure \\ \hline Invalid & CP \ signal \ can't \ be \ classified \\ \hline Error \ functions & State & Misc. \\ \hline Uinput \ fault & L/L1op & L/L1 \ conductor \ open \\ \hline L/L2op & L/L2 \ conductor \ open \\ \hline L/L3op & L/L3 \ conductor \ open \\ \hline L/L3op & L/L3 \ conductor \ open \\ \hline Nop & N \ conductor \ open \\ \hline PEop & PE \ conductor \ open \\ \hline L<>PE & L/L1 \ and \ PE \ conductors \ crossed \\ \hline Uext \ (PE) & External \ voltage \ on \ PE \ (on \ input \ side) \\ \hline \end{array}$	
D       246 Ω ± 1.5 %         Diag. functions       Error       Misc.         System state       A1       no EV connected         A2       no EV connected / PWM         B1       EV connected / PWM         B2       EV charged         C1       EV charged / PWM         D1       EV charged and ventilation on         D2       EV charged and ventilation on / PWM         E       Error         F       Failure         Invalid       CP signal can't be classified         Error functions       State       Misc.         Uinput fault       L/L1op       L/L1 conductor open         L/L2op       L/L2 conductor open         L/L3op       L/L3 conductor open         Nop       N conductor open         PEop       PE conductor open         L<>PE       L/L1 and PE conductors crossed         Uext (PE)       External voltage on PE (on input side)	
Diag. functions         Error         Misc.           System state         A1         no EV connected           A2         no EV connected / PWM           B1         EV connected / PWM           C1         EV charged           C2         EV charged / PWM           D1         EV charged and ventilation on           D2         EV charged and ventilation on / PWM           E         Error           F         Failure           Invalid         CP signal can't be classified           Error functions         State         Misc.           Uinput fault         L/L1op         L/L1 conductor open           L/L2op         L/L2 conductor open           L/L3op         L/L3 conductor open           Nop         N conductor open           PEop         PE conductor open           L<>PE         L/L1 and PE conductors crossed           Uext (PE)         External voltage on PE (on input side)	
System state         A1         no EV connected           A2         no EV connected / PWM           B1         EV connected           B2         EV connected / PWM           C1         EV charged           C2         EV charged and ventilation on           D1         EV charged and ventilation on / PWM           E         Error           F         Failure           Invalid         CP signal can't be classified           Error functions         State         Misc.           Uinput fault         L/L1op         L/L1 conductor open           L/L2op         L/L2 conductor open           L/L3op         L/L3 conductor open           Nop         N conductor open           PEop         PE conductor open           L<>PE         L/L1 and PE conductors crossed           Uext (PE)         External voltage on PE (on input side)	
A2 no EV connected / PWM B1 EV connected B2 EV connected / PWM C1 EV charged C2 EV charged / PWM D1 EV charged and ventilation on D2 EV charged and ventilation on / PWM E Error F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open L/L3op N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
B1 EV connected B2 EV connected / PWM C1 EV charged C2 EV charged / PWM D1 EV charged and ventilation on D2 EV charged and ventilation on / PWM E Error F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open L/L3op N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
B2	
C1 EV charged C2 EV charged / PWM D1 EV charged and ventilation on D2 EV charged and ventilation on / PWM E Error F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open L/L3op N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
C2	
D1 EV charged and ventilation on D2 EV charged and ventilation on / PWM E Error F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open L/L3op N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
D2 EV charged and ventilation on / PWM  E Error F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open Nop N conductor open Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
E Fror F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
F Failure Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
Invalid CP signal can't be classified  Error functions State Misc.  Uinput fault L/L1op L/L1 conductor open L/L2op L/L2 conductor open L/L3op L/L3 conductor open Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
Error functions         State         Misc.           Uinput fault         L/L1op         L/L1 conductor open           L/L2op         L/L2 conductor open           L/L3op         L/L3 conductor open           Nop         N conductor open           PEop         PE conductor open           L<>PE         L/L1 and PE conductors crossed           Uext (PE)         External voltage on PE (on input side)	
Uinput fault         L/L1op         L/L1 conductor open           L/L2op         L/L2 conductor open           L/L3op         L/L3 conductor open           Nop         N conductor open           PEop         PE conductor open           L<>PE         L/L1 and PE conductors crossed           Uext (PE)         External voltage on PE (on input side)	
L/L2op L/L3 conductor open L/L3 conductor open Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
L/L3 op L/L3 conductor open  Nop N conductor open  PEop PE conductor open  L<>PE L/L1 and PE conductors crossed  Uext (PE) External voltage on PE (on input side)	
Nop N conductor open PEop PE conductor open L<>PE L/L1 and PE conductors crossed Uext (PE) External voltage on PE (on input side)	
PEop PE conductor open  L<>PE L/L1 and PE conductors crossed  Uext (PE) External voltage on PE (on input side)	
L<>PE L/L1 and PE conductors crossed  Uext (PE) External voltage on PE (on input side)	
CP short/Error 2 CP-PE shorted	
PE open/Error 3 PE opened	
General	
Battery power supply 7.2 V DC (4.4 Ah Li-ion)	
Battery charging time typically 4 h (deep discharge)	
Mains power supply 115 V ~ ± 10 %	
230 V ~ ± 10 %	
230 V / 400 V 3~ ± 10 %	
50 Hz - 60 Hz, 60 VA	
Protection category 300 V CAT II	
Measuring category 300 V CAT II	
Degree of protection IP 65 (case closed)	
IP 40 (case open)	
IP 20 (mains test socket)	
Dimensions (W x H x D) 36 cm x 16 cm x 33 cm	
Working temperature range -10 °C 50 °C	
Maximum relative humidity 90 %RH (0 °C 40 °C), non-condensing	
Working nominal altitude up to 3000 m	
Bluetooth module Class 2	

Measuring and Regulation Equipment Manufacturer Ljubljanska 77, SI-1354 Horjul, Slovenia T +386 (0)175 58 200, F +386 (0)175 49 226 metrel@metrel.si, www.metrel.si

### **KEY FEATURES**

- Functional testing of EVSE via simulation of electrical vehicle's CP and PP circuits.
- · Diagnostic testing of EVSE via simulation of errors on CP circuit.
- · Electrical safety testing of EVSE.
- Functional testing of Mode 2 EV cables via simulation of electrical vehicle's CP and PP circuits.
- Diagnostic testing of Mode 2 EV cables via simulation of errors on CP circuit.
- Simulation of faults on mains for verification of Mode 2 EV charging cable safety features.
- Electrical safety testing of Mode 2 and Mode 3 EV cables.
- · Accessible inputs/outputs for connection of safety testers.
- 1-phase and 3-phase Mode 2 cable connections.
- Integrated 4400 mAh Li-Ion battery.
- Bluetooth communication with Metrel safety testers.

### SUPPORTED INSTRUMENTS

- MI 3152 EurotestXC
- MI 3152H EurotestXC 2.5kV
- MI 3155 EurotestXD
- MI 3325 MultiServiserXD

# **STANDARDS**

# **Electromagnetic compatibility**

EN 61326

### Safety

- EN 61010-1
- EN 61010-2-030
- EN 61010-031

# Functionality

- EN 61851-1
- EN 61557 series

## Li - ion battery pack

• IEC 62133

# ORDERING INFORMATION



# Standard set A 1632

- A 1632 eMobility Analyser
  Type 2 Male plug adapter with long CP pin (2 x Metrel connector), 2 m
- 1-phase EU 3 phase CEE (16 A) mains cable, 2 m
- 2 mm banana to 4 mm cascade banana adapter, 1 m
- · Protective bag for accessories (mounted on the case)
- Metrel eMobility App for Android\*
- Instruction manual
- Calibration certificate

\*The eMobitliy App can be downloaded free of charge from Android Market.

Note: The Android app eMobility allows only performing functional EVSE tests.

